LCD aan anno ann anno ann an a a anno. An anno ann an anno an anno an anno an an anno anno.

1: | : HD 3, 6MP CCD 2: | : HD 3, 6MP CCD 4: | : 1-600X | : HD OLED | : . 5: | : : 15mm - | : .

×






Main parameters

- 1:Pixel: HD 3.6MP
- 2:Display: 4.3 inches HD OLED display.
- 3:Magnification: 1-600X continuous magnification system.
- 4:Object distance: 15mm-- infinity (Depend on the different distance)
- 5:With built-in lithium battery, available for working more than 6 hours continuously.
- 6:Languages: English, Spanish, Japanese, Korean, Thai, Russian, Hebrew, German, Portuguese, French, Italy, Turkey, Czech, Poland, Traditional/simplified Chinese.

Intelligent universal support

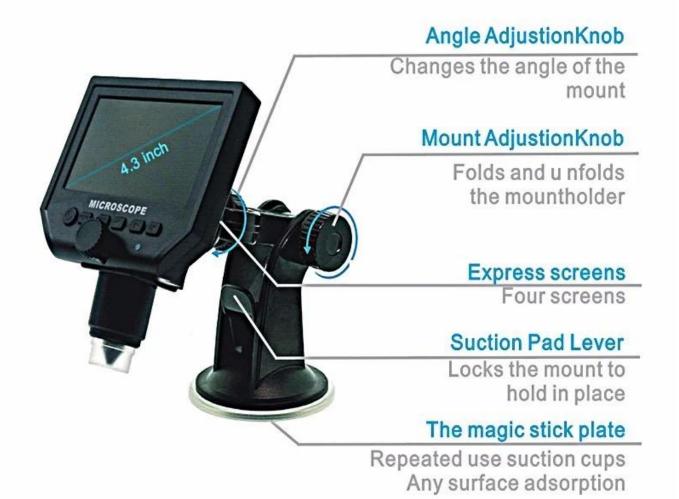

The intelligent universal support is super light and powerful, can be adsorbed on the surface of glass/ceramic/marble/plastic board and others.



The silicone sucker will not leave marks on any surface.after long-term using, it can be cleaned by water when there's dust on the surface.



The closest distance of microscope and the goal is -15mm, the magnifying time is the maximum, the magnifying time will be smaller as the distance increasing.











MENU) (MODE) (





(MENU)

Function setting key:

Resolution: 1080P, 720P, VGA

Date Tag: Displayed /Not displayed

Motion Detection: ON/OFF (When it's on it will

start to record a video automatically, as soon

as detecting something's moving .)

Cyclic Record: off/3 minutes/5 minutes/10 minutes. As soon as the memory card's memory is full, it will delete the first video and save the new video automatically.

Exposure value: +2.0 (0) -2.0

Format: Yse / NO

Automatic shutdown: off, 1 minutes, 3 minutes,

Automatic turn off the LCD: off, 1,3,5 minutes

Factory Reset: Yes / No

Light source's frequency: 50HZ, 60HZ

Time setting: year, month, day, hours,

minutes, seconds

Image rotating on / off

Light: on / off

Software version: V1.10

MODE

Mode button:

Recording Video mode:

Taking Photos mode: (5M, 2M, 1.3M, VGA)

press OK button for taking photos


Playback mode: delete, lock / unlock



Left button, right button, OK button (photo / video, open key)

(b) Power On/Off

Press it once to turn on, press once again to turn off.

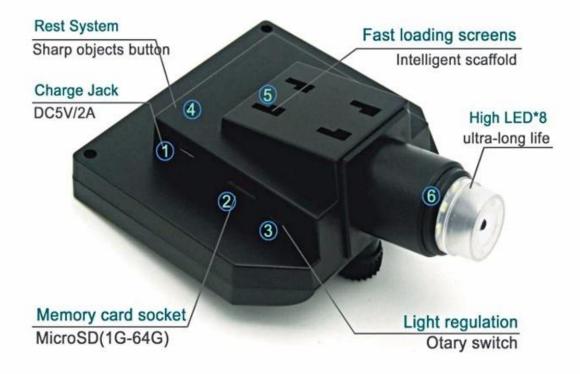

- 1: Power DC interface (5P MINI).
- Memory card's socket (Micro SD), supporting (1-64GB).
- 3: Brightness Adjust button
- 4: REST button, restore the system. (If the machine can not work, please press the button with sharp objects to restart it.)
- 5: Fast loading 4 holes' bayonet, push the bracket's 4 claws into the bayonet, hearing "ka" once, it says the assemble is finished.
- High brightness 8 LEDs, available for up to 100 thousand hours.

Accessories icon:



Microscope, power supply, data line, multi functional support, user's manual.



Made in China







×

- <u>1</u>* |
- 1 * | | | | | | |
- 1 * | | | | | |
- 1 *000 000

1 * | | | | | |

x x x x

×