Product Features:

Unique features:

Automatic density analysis

200X digital magnification

Imported electronic components

Elegant apperence design


Field of application:

Textile, Clothing Industry, Consumer electronic, Industry inspection, Instrument, Health Care, Laboratory, Vehicle maintenance and repair, Auto industry, Sewer and Pipe inspection, Security.

Software Application on Windows:

software provides snapshot, video recording, measurement, and etc

Product Pictures:

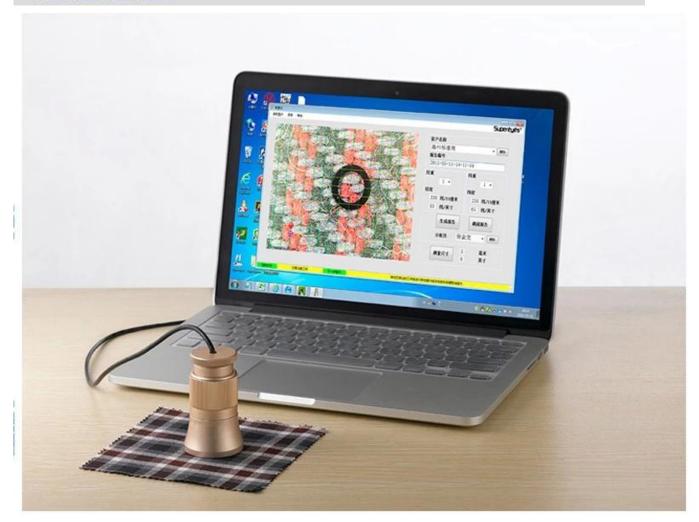







Model	SE-S003
Focus	Manual Focus
Focal Distance	3 mm — infinity, customized
Magnification	50 — 200X (continuous zoom)
Sensor	2 MP
Pixels	1600*1200, 640 * 480, 320*240
Video Resolution	Max 640*480
Photo Format	JPEG, BMP
Video Format	WMV, DZC
System	Windows XP SP2 and above, Mac OS X 10.5 and above, Linux
SnapShot	Software control (Windows only)
Date saving	Yes
Mac OSX	Photo Booth or FaceTime
Light Source	LED lights
Port	USB 2.0
Frame Speed	Max 30 frames/second
Material	Metal
Product Size	φ44 mm * 46mm
Gross Weight	600 g
N.W.	200 g
Warranty	1 year
OEM/ODM	Acceptable
Small quantity order	Acceptable

Application:

Plug C003 to computer, put it onto the object and make sure logo face to operator.

Double click to run the software

Rotate the central knob to adjust suitable magnification

Rotate focus knob to make image clear; to make the density inspection precise and easy, please keep the textile texture horizontal and vertical

Set 3 sampling points by click left button; To be convenient to adjust, please choose intersections of warp and weft and set the second sampling point in the corner. If sampling points is not ideal, please click it by left button to activate it(overstriking), then use Mouse for rough adjustment or use direction key in the keyboard for precise adjustment until computer density lines match the warp and weft of textile perfectly. Current data shows the warp density and weft density on the right part of the software.

Read picture: Reading picture is only for double analysis for existing pictures, which are saved during report generation. Please follow this step during reading picture: select picture->open; It may cause unpredictable problems if double click the selected pictures. Customer name and analyst. Select: pull down list and click left button; Add new: input in customer name column and save by report generation. Delete: pull down list, select and delete by clicking right button

Report number generates by system chronologically

Measure Click in the lower right corner; after the symbol changes to, set 2 arbitrary points to measure the length. Click again after measurement, software will return to density analysis condition.

Approval Certification:







Why Choose US:

Our goal is to provide customers products of high quality, competitive price, and superior services.

- 1.Established in 2005, about 10 years of history;
- 2.Own main factories, supply diversification products and One stop service
- 3. Certificates of ISO9001, UL, CE, EMC, CQC, RoHS, Reach, etc.
- 4. Six years Gold member in Alibaba, Aliexpress etc
- 5. Production capability more than 100 thousands pcs/ month;
- 6.Monthly export more than 50 times delivery;
- 7.Exported to more than 20 countries and regions;
- 8. We provide an excellent combination between prices, quality & respond, delivery, after-sales!

